



Roosebeck **Care** **Hammered Dulcimer Stand**

- Use a dry soft cloth for dusting
- Use a damp soft cloth for cleaning
- Avoid extreme temperatures
- Avoid extremely dry conditions
- Avoid direct sunlight
- Avoid using abrasives

Accessories

Dulcimers and accessories are available at www.ensoulmusic.com




EnSoul
MUSIC DESIGNS

www.ensoulmusic.com

© Copyright 2017. Mid-East Mfg. Inc.
Dulcimer Stand

Roosebeck[™]
FINE INSTRUMENTS

**HAMMERED
DULCIMER STAND**

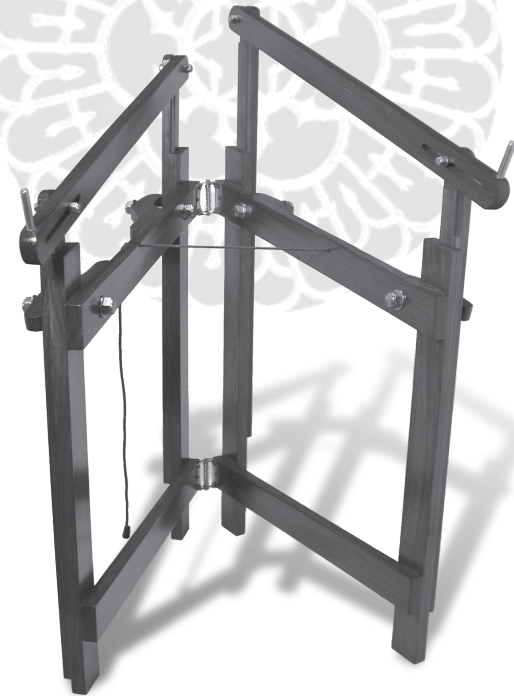

– OWNER'S GUIDE –

Roosebeck™ Hammered Dulcimer Stand

Assembly Instructions

Loosen the cord securing the legs. This cord should stay connected to the legs and will hold them at the proper angle when they open.

Place one of the instrument rests (Parts: B) so that it runs between points *i* and *ii* on the top of the open legs; to the inside of the up-right adjustable arms. The brass pegs on the instrument rest should be close to the *ii* position and pointed up.

Secure the instrument rest to the legs by sliding the brass nut and bolt through the holes at *i* and *ii* and through the holes and slot on the instrument rest. There are two washers and two nuts for each bolt. The washers should be between the instrument rest and the nut. Hand tighten only.

Roosebeck™ Hammered Dulcimer Stand

Height Adjustment

To adjust the stand, loosen the 4 brass wing-nuts. The front and back (*i* and *ii*) of each instrument rest will adjust up and down independently. Slide the up-right adjustable arms up to the desired height. If slides are tight, wax may help them slide.

When you have the stand at the desired height, tighten the wing-nuts. The stand should be positioned so that the wider, open side, is facing the player.

PARTS:

A: 1 Fully assembled spring-hinged legs

B: 2 Instrument Rests (left & right)

C: 4 Brass double nut and bolt sets

